


# SWAB

## reference guide

# Virus Testing

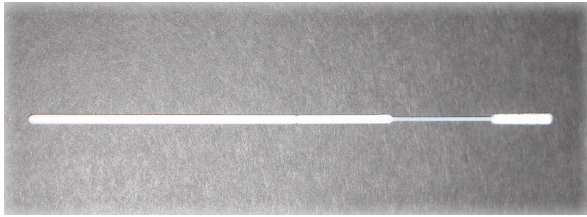

Swab Flocked Mini-Hylon Tip

**After collection:** Place swab in viral transport media (VTM). Break swab shaft at score line. Discard top portion of shaft. Screw cap tightly on VTM container. Refrigerate.



Viral Transport Media (VTM)

FREQUENTLY ORDERED TESTS	TEST CODES
Bordetella Pertussis by Real-time PCR	PPERT
Chlamydia Trachomatis Culture	CCHL
Herpes Virus 1 and 2 detection and typing by PCR	HLPCR
Influenza AB, RSV by PCR	FLURSV
Respiratory Virus Panel, PCR	RESPAN
Varicella Zoster Virus Antigen Detection, FA	VZVFA
Viral Culture	CVIR